



Black



Grey



White



Camouflage

CircDisCover



Base plate



Hook and loop base plate fastener

'CircDisc' (Intuitive Positioning System)



Vertical Handsfree Mode



Horizontal Handsfree Mode



Elastic anchor loop









CircDisCover




A Hold the bag with your left hand. **B** Using your left hand, pull the **Release D-Ring** (white) until the **shoulder strap** has reached maximum length. **C** Place the **strap** over your left shoulder. Pull the **Compression D-Ring** (black) to tighten the **strap**. In this way you can position the bag under your arm or on your back. **D** To position the bag in front of your body loosen the **strap** by pulling the **Release D-Ring** (white). **E** Unlock the **CircDisc pull tab** (hook and loop) and rotate the bag to **Vertical Handsfree Mode**. **F** Press down on the **CircDisc** pull tab to lock it into the correct. **G** Fold the bag open by unzipping both zippers. **H** **Vertical Handsfree Mode**. **I** To switch to **Horizontal Handsfree Mode** unlock the **CircDisc** pull tab and rotate the bag to the desired position. Lock the **CircDisc** again and you have **Horizontal Handsfree Mode**! **J** Fold the bag shut. **K** Close the zippers. **L** Release the **Fidlock Magnetic Snap**. **M** Tighten the **shoulder strap** by pulling on the **Compression D-Ring** (black). **N** Position the bag on your back. **O** Worn underneath your jacket the bag is almost invisible making it a seamless extension of your body!

VIDEO online: www.bagjack.com

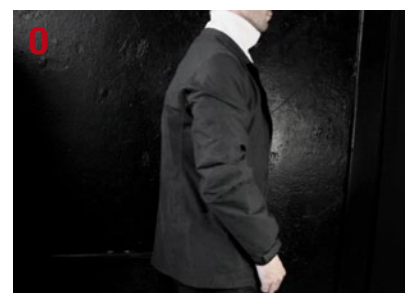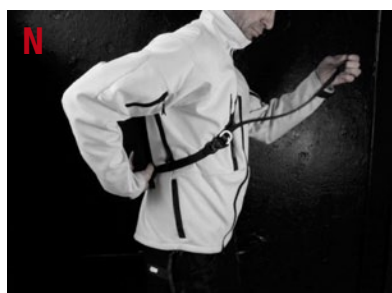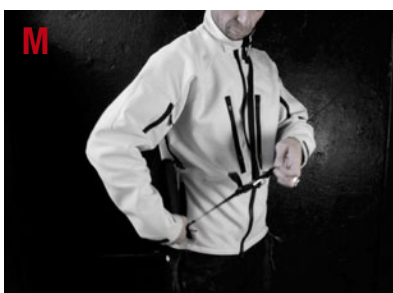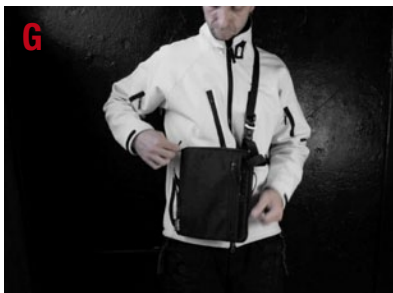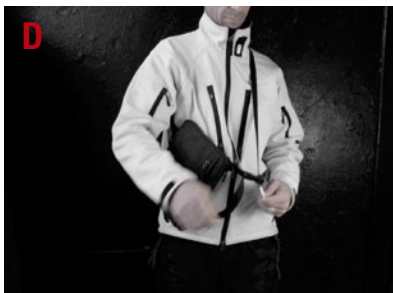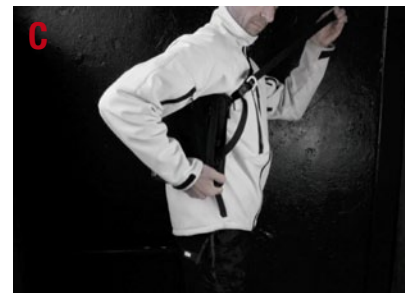

CARRY OPTIONS

- 1** Horizontal Briefcase Mode
- 2** Wrist Strap Mode ('Detlef style')
- 3** Vertical Mode
- 4** Business Mode
- 5** Backpack Mode
- 6** Horizontal Handsfree Mode
- 7** Tech Geek Mode
- 8** Messenger Mode
- 9** Vertical Handsfree Mode

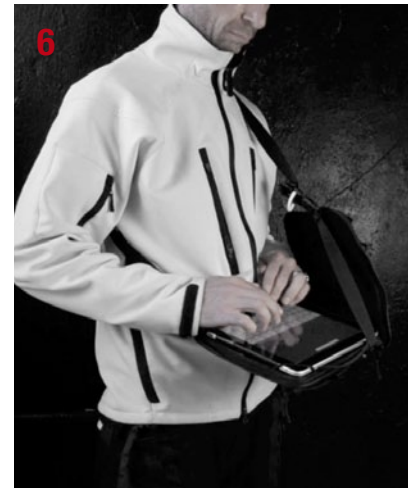



bagjack Brückenstrasse 1 D-10179 Berlin tel. +49 30 61287733 fax. +49 30 61287734 e-mail info@bagjack.com
BAGJACK e.K. manager Peter Brunsberg HRA 40667 B local district court Berlin tax ID no DE136870297 tax no 34 244 51683
Deutsche Bank account no 726 43 77 bank code 100 700 24 IBAN DE91 100 700 240 726 437 700 BIC DEUTDE33HAN
